


19359

| | | |
|----|----------------------------|------------------|
| D | MONTAGEANLEITUNG: | STREBE |
| GB | INSTALLATION INSTRUCTIONS: | BRACE |
| F | NOTICE DE MONTAGE: | RENFORT |
| CZ | NÁVOD K MONTÁŽI: | VZPĚRA |
| PL | INSTRUKCJA MONTAŻU: | WSPORNIK |
| SK | NÁVOD NA MONTÁŽ: | VÝSTUŽ |
| RU | ИНСТРУКЦИЯ ПО МОНТАЖУ : | УГЛОВАЯ РАСПОРКА |
| E | INSTRUCCIONES DE MONTAJE: | SOSTÉN |
| RO | INSTRUCȚIUNI DE MONTAJ: | BARĂ |

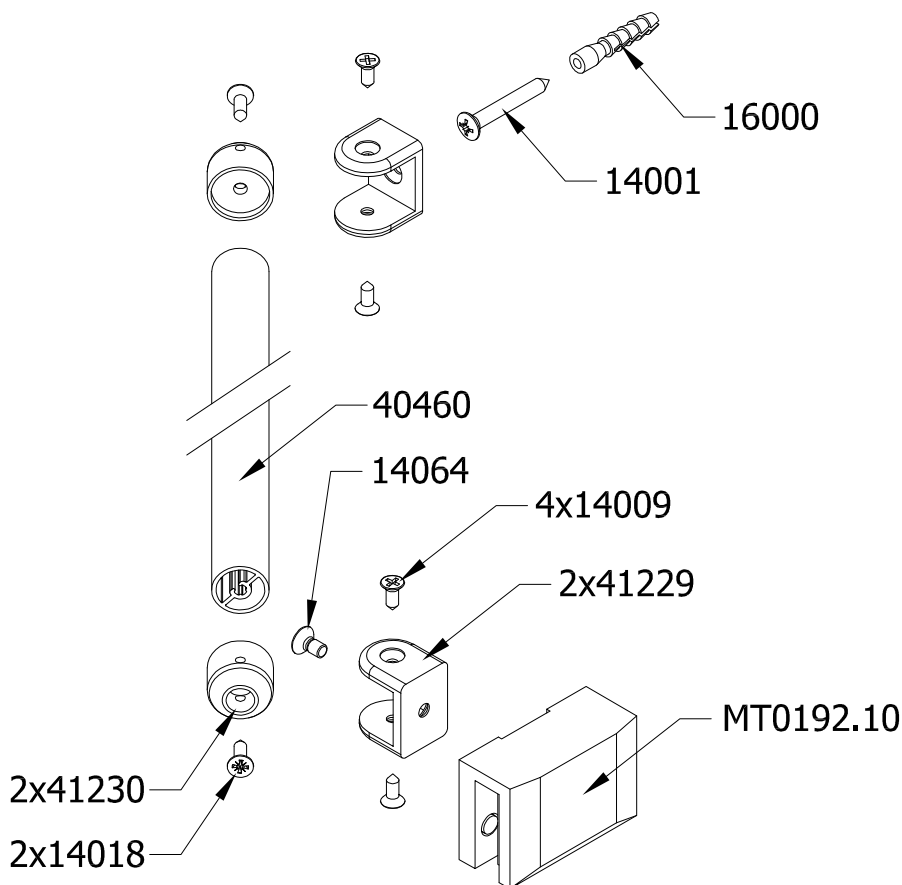

Benötigtes Werkzeug:

Necessary tools:

Outil Nécessaire:





Nářadí potřebné pro montáž:

Potrzebne narzędzia:

Potrebné náradie:

необходимые инструменты:

Herramientas necesarias:

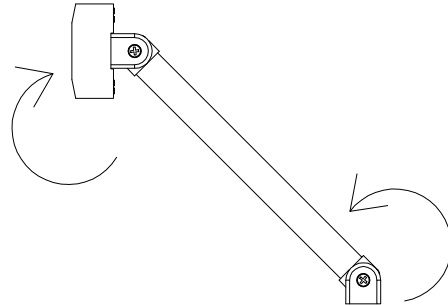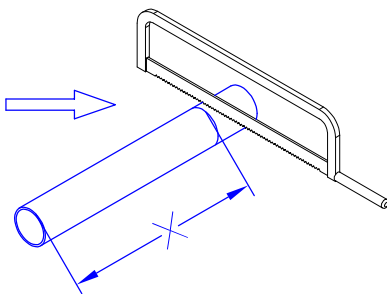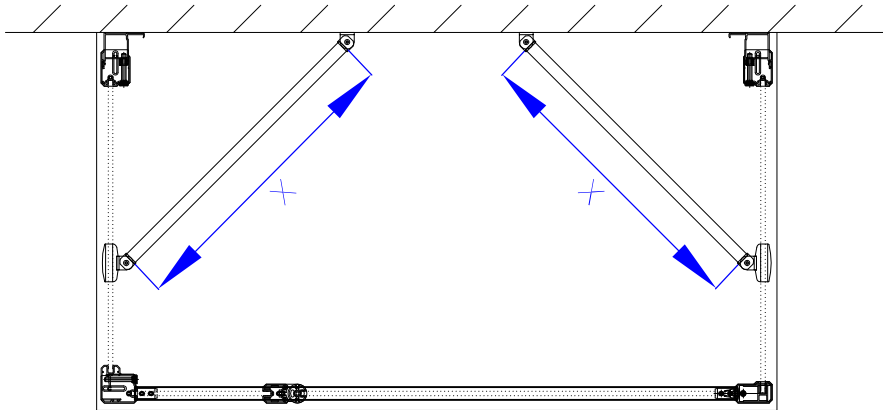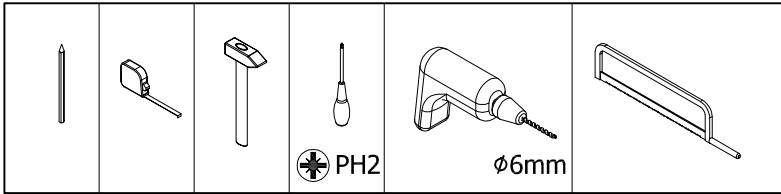

Zubehör:

Equipment:

Accessoires:










Příslušenství:

Dodatki:

Príslušenstvo:

Аксессуары:

Accesorios:

| | | | | | | | | |
|---|---|---|---|---|---|---|---|--|
|  |  |  |  |  |  |  |  |  |
| 1 x 11221 | 1 x 14001 4,2 x 38mm | 4 x 14009 3,5 x 9,5mm | 2 x 14018 3,5 x 13mm | 1 x 16000 Ø 6mm | 2 x 41229 | 2 x 41230 | 1 x 14064 M4 x 8mm | 1 x MT0192.10 |