


19284


(D)	MONTAGEANLEITUNG:	VERKÜRZT SEITENWAND
(GB)	INSTALLATION INSTRUCTIONS:	SHORTENED SIDE WALL
(F)	NOTICE DE MONTAGE:	PAROI FIXE RACCOURCIE EN ANGLE
(CZ)	NÁVOD K MONTÁŽI:	ZKRÁCENÁ BOČNÍ STĚNA
(PL)	INSTRUKCJA MONTAŻU:	SKRÓCONA ŚCIANA BOCZNA
(SK)	NÁVOD NA MONTÁŽ:	SKRÁTENÁ BOČNÁ STENA
(RU)	ИНСТРУКЦИЯ ПО МОНТАЖУ:	УКОРОЧЕННАЯ ФИКСИРОВАННАЯ ПАНЕЛЬ
(E)	INSTRUCCIONES DE MONTAJE:	PARED LATERAL ACORTADA
(RO)	INSTRUCȚIUNI DE MONTAJ:	PERETE LATERAL SCURTAT

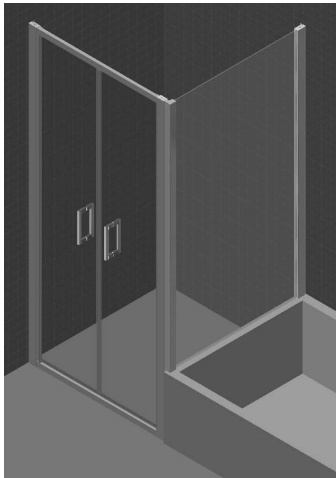

Benötigtes Werkzeug:
Necessary tools:
Outil Nécessaire:
Nářadí potřebné pro montáž:
Potrzebne narzędzia:
Potrebne náradie:
необходимые инструменты:
Herramientas necesarias:









1x

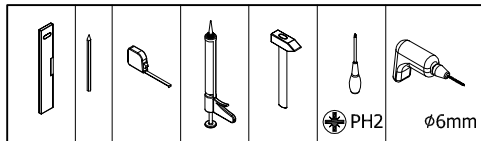





Zubehör:
Equipment:
Accessoires:
Příslušenství:
Dodatki:
Príslušenstvo:
Аксессуары:
Accesorios:

3x14295 4x32mm	3x16000 Ø6mm	3x81254	1x14196 3,5x13 mm
1x81331	1x81332	1x81237	












1.

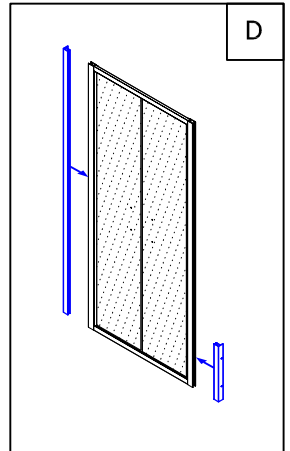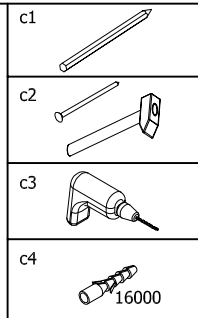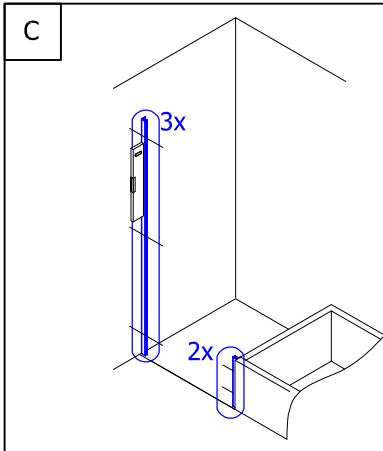
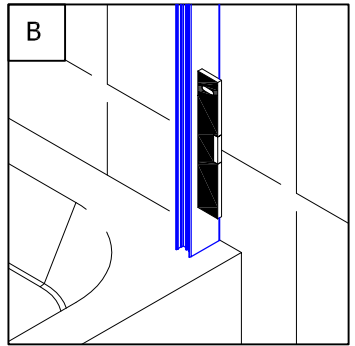
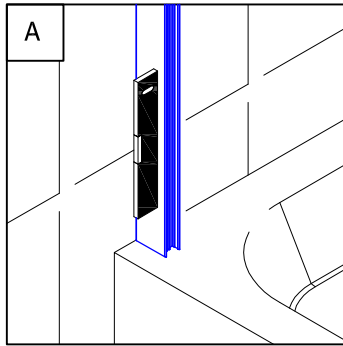
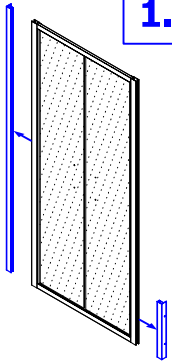


2.

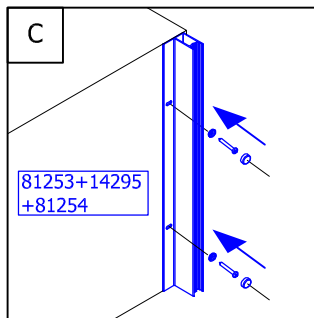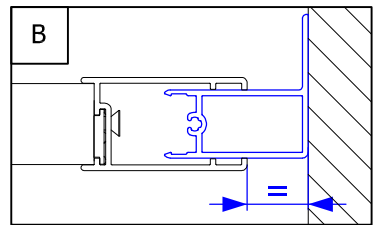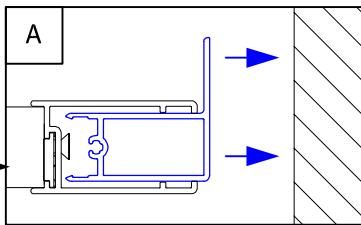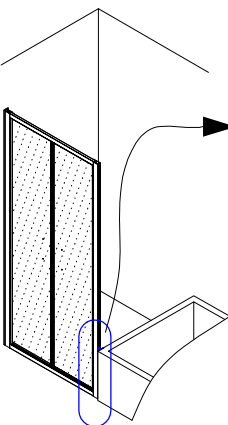

3.

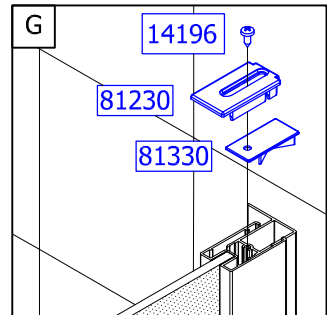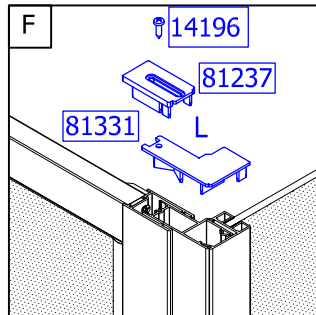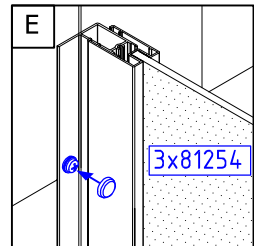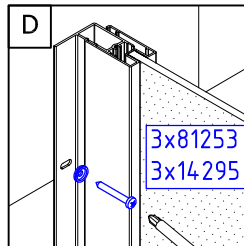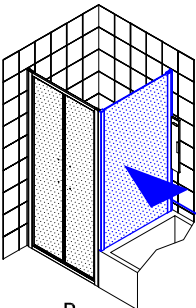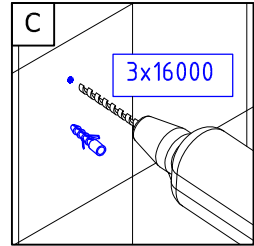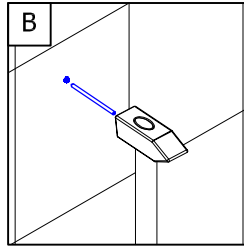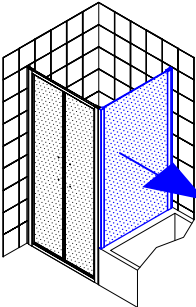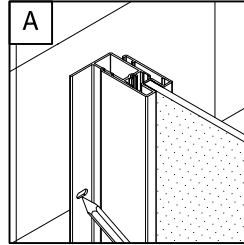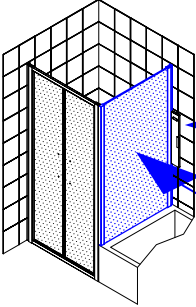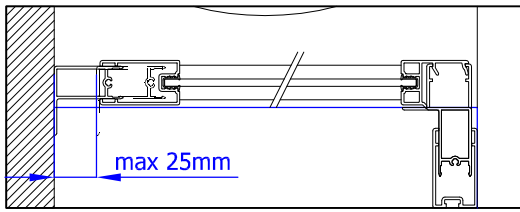

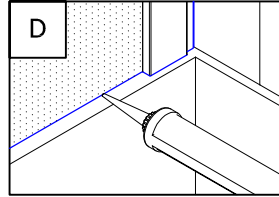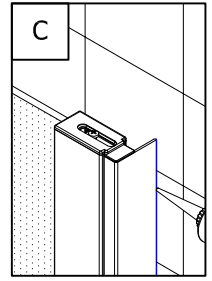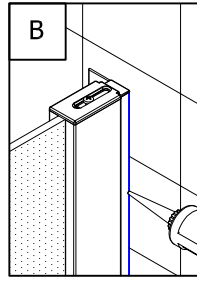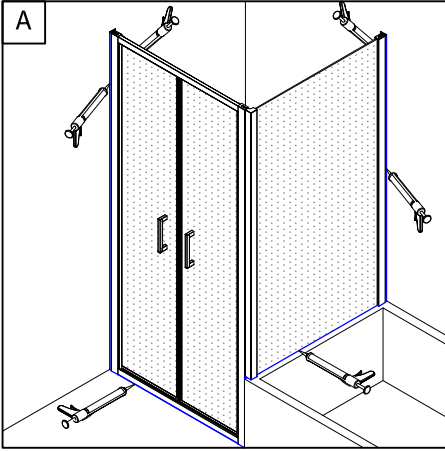

Achtung! Nur Sanitär-Silikon - bakterizid und fungizid eingestellt verwenden.

Caution! Use only bactericidal and fungicide sanitary silicone.

Attention! N'utiliser que du silicone sanitaire bactéricide et fongicide.



Pozor! Používejte pouze baktericidní a fungicidní sanitární silikon.

Uwaga! Stosować tylko silikon sanitarny - bakterio i grzybobójczy.

Pozor! Užívajte pouze baktericidný a fungicidný sanitárny silikón.

Внимание! Применяйте только антибактериальные силиконовые герметики с фунгицидом

Cuidado! Utilizar solamente silicona sanitaria bactericida y fungicida.

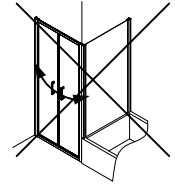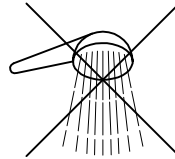

4.

